General

Hour is designed for measuring time range (max 99.999hours) for any Loads that works with Network.

Usage of Device and Working Principle

Please make the connections according to the diagram. When the product first energized, it starts counting the time from zero as an hour (3 digit), minute (2 digit), second (1 digit). If the device gets de-energized, it saves the latest time that has been reached. When it is energized once again it starts to count where it is left off. Device counts maximum untill 99,999 hours, after the time is up just second keeps moving on and the second ticks in every 6 seconds.

For reseting the device please press the reset button approximately 5 seconds so that you can see all the digits turns into ZERO.

For reseting the time of DHM-DIN please use a stick that is non-conductor.

Maintenance

Switch off the device and release from connections clean the trunk of device with a swab. Don't use any conductor or chemical might damage the device. make sure device works after cleaning.

Warnings

Please use the device according to the manual. Don't use the device in wet

Include a switch and circuit breaker in the assembly. Put the switch and circuit breaker nearby the device, operator can reach easily.

Mark the switch and circuit breaker as releasing connection for device.

For reseting the time of DHM-DIN please use a stick that is non-conductor

Tecnical Specifications:

Operating Voltage(Un)..: 150V - 260V AC 10minutes Operating Frequency....: 50/60 Hz Operating Power.....: <6VA Operating Temperature .: -20°C +55°C Time...... 99.999hours Display..... 2x3 digit 9.2mm display Time Sensitivity..... ±%001

Connection Type....... Terminal connection

Weight..... max. 80gr.

Mounting...... Panel front mounted(DHM-48)

Vertical assembled in the panel or assembled on

1000hours up

1000hour down


the din rail (DIN)


Operating Altitude.....: <2000meter

Cable Diameter.......... 2,5mm2 (DHM-DIN), 1,5mm2 (DHM-48)

Contacts: www.tense.com.tr info@tense.com.tr


00000 Connection diagram for DHM-48 DHM-DIN 128 L3 e

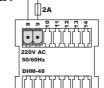

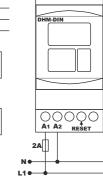

L3 4

Dimensions for DHM-48

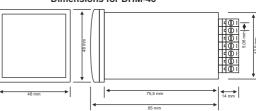



Dimensions for DHM-DIN

